




What to do if...

List of Warning/Indicator Lights















Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

-  (U.S.A.)
Brake system warning light
-  (Canada)

Stop the vehicle immediately.

-  Charging system warning light

Have the vehicle inspected immediately.

-  (U.S.A.)
Malfunction indicator lamp
-  (Canada)
-  SRS warning light
-  (U.S.A.)
ABS warning light
-  (Canada)
-  Electric power steering system warning light
-  (Flashes)
“PCS” warning light (if equipped)
-  Slip indicator
-  (Flashes)
“AFS OFF” indicator (if equipped)
-  (Flashes)
Brake hold operated indicator
-  (U.S.A.)
Parking brake indicator
-  (Canada)
(Flashes)
-  Brake system warning light
-  (Blinking and then continuously on)
Tire pressure warning light

For further information, refer to the Owner’s Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



(Illuminates
without
blinking)

Tire pressure warning light*



Seat belt reminder light

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

See the Owner's Manual


	Turn signal indicator		Intuitive parking assist indicator (if equipped)
	Headlight indicator (U.S.A.)		"AFS OFF" indicator (if equipped)
	Tail light indicator (Canada)		Slip indicator
	Headlight high beam indicator		VSC OFF indicator
	Front fog light indicator (if equipped)		"PCS" warning light (if equipped)
	"READY" indicator		Parking brake indicator (U.S.A.)
	EV indicator		Parking brake indicator (Canada)
	Cruise control indicator		Brake hold standby indicator
	Radar cruise control indicator (if equipped)		Brake hold operated indicator
	Cruise control "SET" indicator		"AIR BAG ON/OFF" indicator
	LKA (Lane-Keeping assist) indicator (if equipped)		

For further information, refer to the Owner's Manual.

What to do if...

If the electronic key does not operate properly

Unlocking and locking the doors

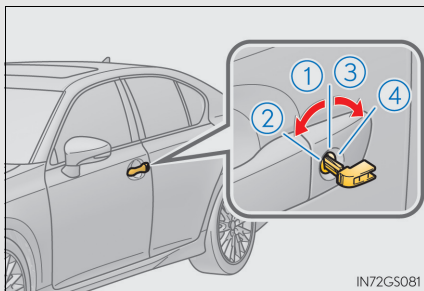


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof* (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof* (turn and hold)

*: This setting must be customized at your Lexus dealer.


Unlocking the trunk

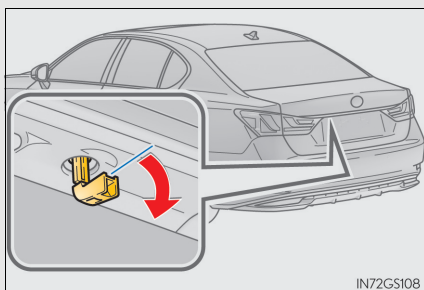


Turn the mechanical key clockwise to open.

What to do if...

Starting the hybrid system

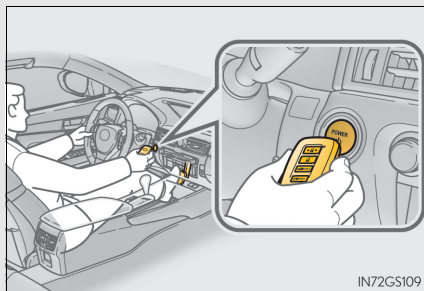

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch. The power switch will turn to ON mode.
When the smart access system with push-button start is deactivated in customization setting, the power switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the power switch.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.



If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.